No Ordinary Paper

Guide for Optimum Printing Results

Thank you for purchasing No Ordinary Paper 120micron.
For No Ordinary Print Results, it is important to read this guide before printing.

1. Ensure the printer you are using is a dry toner copier/laser printer or a production digital printer. No Ordinary Paper is not compatible with inkjet printers.



2.




Fan the paper very thoroughly, ensuring no sheets are stuck together before loading into the printer.

3.



Insert the fanned paper into your printer; we recommend using the bypass tray where practical.

4. Adjust the paper settings on your printer for the tray you have loaded the paper into. This is very important as No Ordinary Paper will not print well using Plain Paper setting. We recommend using settings such as Transparency, Film or Glossy Card.

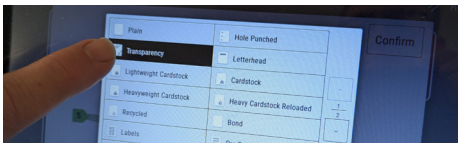

5. Check the print result to ensure all colours are bright and the print is strongly adhered; you can test this by running your fingernail across an area of solid print.



6.



Try blasting the print off with a pressure washer!
This is No Ordinary Paper.

www.noordinarypaper.com